




FRONT SUPERBUMP INSTALLATION INSTRUCTIONS


	NOTICE Read instructions completely before installing this product. Refer back to the instructions frequently during installation.		CAUTION Flying Object Hazard. Fluid Splash Hazard. Wear safety glasses at all times when working on vehicle.
 WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov			

1. Remove front wheel.
2. Remove factory bumpstop.



WOR-308031-INS

3. Installed wheelers bumstop with supplied hardware.

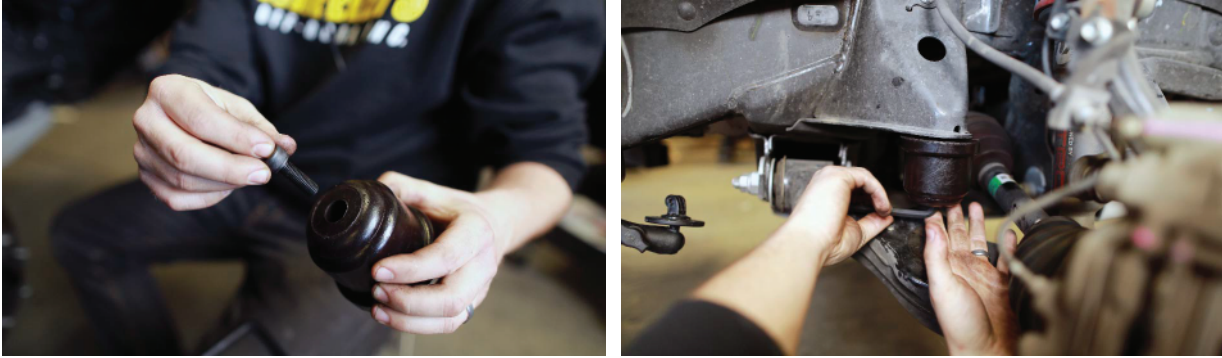

4. Repeat on opposite side.

Note: Wheeler offers a spacer to install above the wheelers superbump to limit suspensions travel if necessary due to larger tires or shock bodies. These spacers are not generally required for installs with 0"-2" of lift. Installs with large amounts of lift or long travel suspension may need to fabricate longer spacers.